



Taege Engineering Limited  
Main West Road  
Sheffield 8173  
Canterbury  
NEW ZEALAND  
Ph. 064 3 318 3824  
Fax 064 3 318 3646  
Email [sales@taege.com](mailto:sales@taege.com)  
[www.taege.com](http://www.taege.com)

## Air Seeder Sensor Wiring Colours

Sensor, Encoder for both wheel or jockey wheel & RPM sensor

### Sensor Connector using 7-core wiring extension

Sensor Switch  
Brown +12vdc


Sensor Switch  
Black signal

Sensor switch  
Blue -12vdc

Wheel encoder  
Blue -12vdc

Wheel encoder signal  
green wire = clockwise  
white wire = anticlockwise

Wheel encoder  
Brown +12vdc

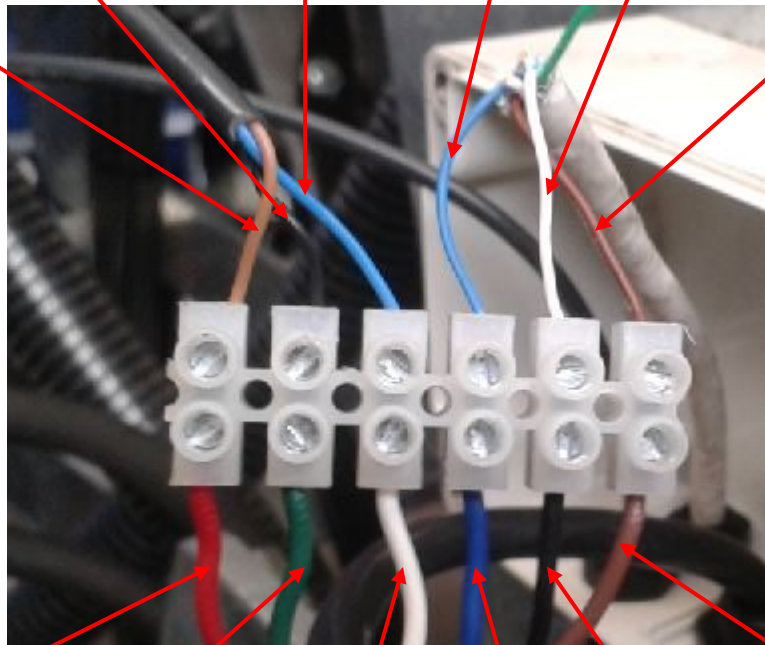

Sensor Switch  
Red +12vdc

Sensor Switch  
Green signal

Sensor switch  
Blue -12vdc

Wheel encoder  
Blue -12vdc

Wheel encoder  
Black signal


Wheel encoder  
Brown +12vdc

WIRING Sensors for  Drills

## Types of 7-core cable

Type 1	Type 2	Type 3
Black	Black	Black
Yellow	Yellow	Yellow
Brown	Brown	Green
Green	Orange	Orange
Blue	Blue	Blue
White	White	White
Red	Red	Red

Signal		Colour
Ground		Blue
Pulse		Black
+12V		Brown



## Magnetic Wheel Encoder Wiring Colours

See Bulletin DD 00001

- Brown** = power supply (+12vdc)
- Green** = clockwise signal out
- (WHITE)** = anti clockwise signal out
- Blue** = negative/ground (-12vdc)
- Voltage regulator is not required.

## RDS TGSS true ground speed radar



### Wiring Colours

- Brown = power Supply (+12vdc)
- Yellow/Green = Signal
- Blue = Ground (-12vdc)

The tractor's own radar may be used with a special Controller wiring loom. Switching is by sensor switch only. See your local service agent or TAEGE representative for further information.

## WIRING Sensors for Drills